

How to Order

- 1 Select the accessories required overleaf and fill in the cost and total in the column provided (add £1.50 for post and packaging if total is less than £10).
- 2 Fill your name and address clearly in the space below. (BLOCK CAPITALS PLEASE)
- 3 Tear off the completed order form along perforation and send together with your cheque or postal order made payable to Goblin Limited to the following address:
Goblin Limited
Service Dept
Cross Green Approach
Leeds
LS9 0SX

Please do not send cash or postage stamps.

Prices valid for 1 year from Rev. date.

NAME

ADDRESS

POST CODE



FOR OFFICE USE ONLY



Upright Vacuum Cleaner

Model 181 Series

Model 191 Series

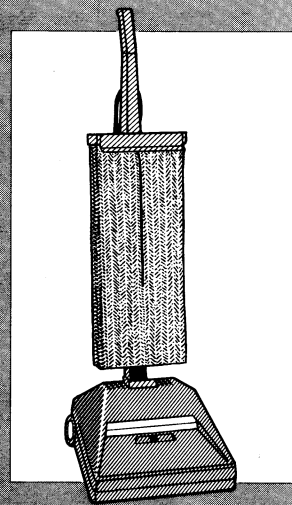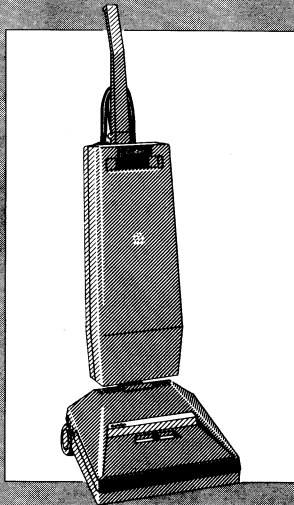

Instructions

Please read instructions carefully before using your vacuum cleaner

Please keep for future reference



Goblin Upright Vacuum Cleaner

Your Goblin upright cleaner has a powerful suction motor and an efficient flow beating action which combine to provide high levels of cleaning on all floor surfaces.

The optional tools extend the use of the cleaner.

To obtain the best results from your Goblin cleaner please read through the instructions carefully and then keep them in a safe place for future reference. Also, don't forget to complete the Registration Card.




Please note that the soft bag and hard box models described are similar in most respects and the instructions apply to both models unless specifically noted.

Unpacking/Assembly

Remove the cleaner from the carton and stand it upright.

Your cleaner may require the fitting of the top handle to the main handle. If so, assemble as follows:

- 1 Insert the top handle into the main handle as shown.
- 2 Fit the screw into the slot.
- 3 Locate the hexagonal nut and tighten the screw. Do not over tighten.

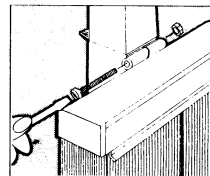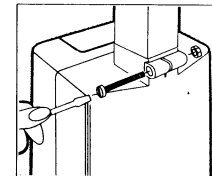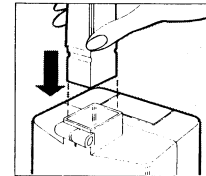

Hard box models

Soft bag models

Fitted Plug

If the appliance is fitted with a moulded-on plug and if the socket outlets in the home are not suitable for the plug supplied with this appliance, it should be cut off and an appropriate three pin plug fitted as detailed in the section "Electrical Connection and Supply".

Please note The plug severed from the mains lead must be destroyed as a plug with bared flexible cord is hazardous if engaged in a live socket outlet.

If the fuse of the moulded-on plug is to be replaced, remove the red cover and use a suitable 13A fuse approved by ASTA to BS 1362 i.e. carries the ⚡ mark.

The fuse cover must always be replaced, never use the plug with the fuse cover omitted.

Replacement fuse cover, red, ref. 12743-70 is available from Goblin Ltd or from your local Authorised Service Agent.

Electrical connection and supply

Check that the supply voltage details given on the rating plate (located on the underside of appliance) are in accordance with your electricity supply.

Important The wires in the mains lead of this appliance are coloured in accordance with the following code: **Blue** - Neutral **Brown** - Live

As the colours of the wires in the mains lead of this appliance may not correspond with the markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured brown must be connected to the terminal which is marked with the letter "L" or coloured red.

The wire which is coloured blue must be connected to the terminal which is marked with the letter "N" or coloured black.



This appliance is double insulated and neither wire must be connected to the earth terminal of the plug which may be marked with the letter "E" or by earth symbol \perp or coloured green or green-and-yellow.

Each wire must be properly connected to the appropriate terminal pin of a suitable plug and the outer sheath of the mains lead securely retained by the anchorage arrangement of the plug. In case of doubt have this undertaken by a qualified electrician as Goblin Ltd do not regard the repair of faults on a mains plug connection as part of the guarantee offered on this product. (If a plug of the 13A fused type is used a standard 13A fuse should be fitted).


This appliance confirms to radio and TV suppression requirements of directive 82/499/EEC.

Your Goblin Upright Cleaner

After plugging in at the mains socket outlet, switch on as follows. Your cleaner is fitted with one of the switches shown below.

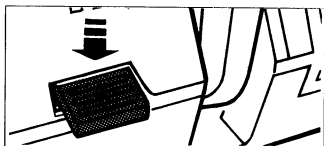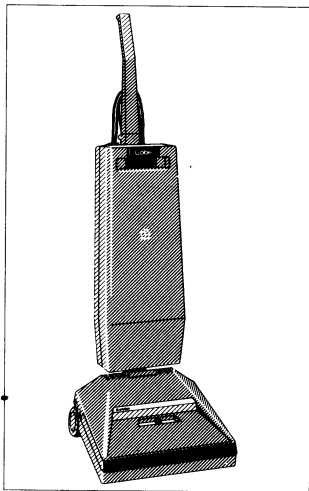



The foot pedal should be lightly pressed once for ON and again for OFF

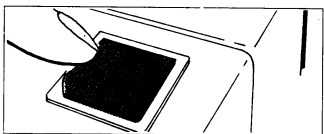

The rocker switch should be pressed I - for lighter cleaning applications
Adjacent switch - maximum power for all household cleaning and when using the tools.
 O - for OFF

Using Your Cleaner

The handle has three positions: **A** for storage, **B** for operating, **C** for cleaning under low furniture. It is released by pressing lightly on the foot pedal marked \downarrow .

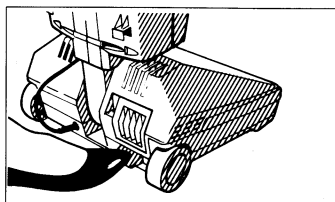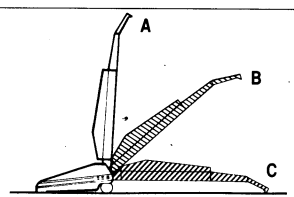

The handle lock operates at position **A** and allows the cleaner to be carried and stored. The handle lock operates between positions **B** and **C** which allows the cleaning head to be raised when passing over carpet edges etc.

The cleaning head is adjustable for different carpet types. To adjust the height slide the knob to the desired position.

IMPORTANT When adjusting the height, tilt the cleaner backwards sufficiently to lift the front wheels from the floor surface.

Suggested settings are:

- uuu - for stuck down carpet, carpet tiles and hard floors
- UUU - normal setting for short and medium pile carpets
- UUUU - for long or very heavy pile carpets
- TOOLS - for when the optional tools are being used.

When cleaning, glide the vacuum cleaner forward and back over the area to be cleaned always at a steady speed allowing sufficient time for the powerful cleaning action to lift the dirt from the floor or carpet surface.

Please Note If the machine sounds laboured, the next setting (for longer carpet pile) should be selected.

Your machine has side suction channels for cleaning close to the wall. The head is fitted with a bumper to protect furniture and skirting.

When using the cleaner it is recommended that the mains cable is held loosely or fitted into the clip on the rear of the handle (soft bag model) to reduce the risk of running over the cable.


Important If the mains cable is run over during cleaning, switch off at the mains immediately and inspect the cable for any damage.

When not in use, return the handle to the upright position and store the mains cable by wrapping it around the clips on the handle.


Checking and Changing the Dustbag

To obtain the best results from your cleaner be sure to change the dustbag when necessary otherwise the airflow and cleaning power will be reduced.


Replacing the Dustbag - Soft Bag Models

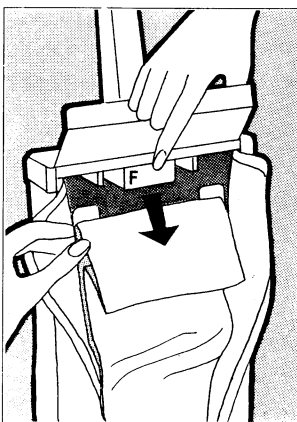

- 1 Lift the flap to reveal the cloth bag.
- 2 Pull down the zip fastener to the bottom
- 3 Remove the bag from the support tube. Press the securing clip **F** (if fitted) to release the cardboard collar. Remove the retaining slide from the bottom of the paper bag and empty. A new bag should be used if the old bag is not in good condition. Refold the bottom of the bag on the lines 1, 2 and 3 and fit the retaining slide over the folds.
- 4 Fit the cardboard collar firmly onto the support tube. Locate at the bottom and then engage under the securing clip **F** (if fitted). The folds of the paper bag should be opened out.
- 5 Pull up the fastener and close the top flap.

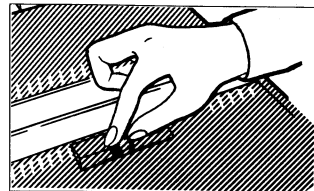

Replacing the Dustbag - Hard Box Models

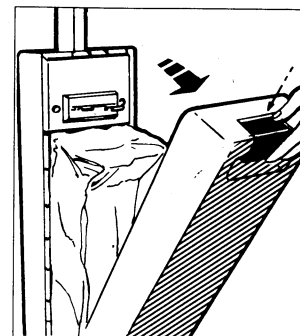


- 1 Depress the bag door latch and lift the door outwards and remove.
- 2 Remove the bag from the support tube by pulling the cardboard collar. Remove the retaining slide from the bottom of the paper bag and empty. A new bag should be used if the old bag is not in good condition. Refold the bottom of the bag on the lines 1, 2 and 3 and fit the retaining slide over the fold.
- 3 Push the collar onto the support tube ensuring that it is secure. The folds of the paper bag should be opened out.
- 4 Locate the bag door in position and close the latch securely.

Replacement Dustbags (P/N 90540-01 pack of 5) are available from Goblin Ltd or from your local Goblin Service Agent. Remember to always keep a spare pack of bags available.

Replacement Dustbag Retainer Slide (P/N 91963-01) Available from Goblin Ltd or your local Goblin Service Agent.

Optional Accessory Tool Kit

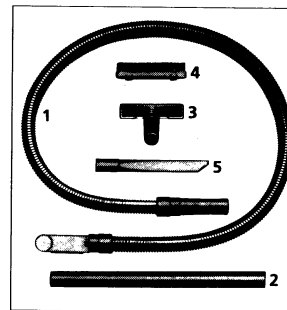


(P/N 80111-01)
 The additional set of cleaning tools extends the use of your cleaner to clean furniture, curtains and into awkward places.

The kit consists of

- 1 Flexible hose
- 2 Extension tube for high cleaning
- 3 Upholstery nozzle for stairs, curtains, furnishings etc.
- 4 Brush insert which clips into the upholstery nozzle for dusting and on hard surfaces
- 5 Crevice tool for furniture, radiators etc.

To Fit the Accessory Tool Kit

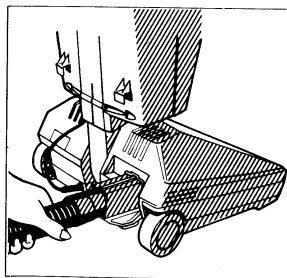

- 1 Switch off the machine at the mains.
- 2 Stand the machine upright. Tilt the handle backwards sufficiently to lift the front wheels from the floor surface and slide the height adjustment knob to the position marked "TOOLS".
- 3 Open the flap marked \blacktriangle and insert the hose end firmly, with the ridge uppermost as shown.
- 4 Attach the tool which is most appropriate to the work in hand. The tools fit together by a simple friction fit.

When removing the hose after cleaning ensure that the flap marked \blacktriangle is securely closed and not obstructed.

Care and Maintenance

ALWAYS SWITCH OFF THE ELECTRICAL SUPPLY AND REMOVE THE PLUG FROM THE SOCKET OUTLET BEFORE CLEANING THE CLEANER OR UNDERTAKING MAINTENANCE OPERATIONS.

Your cleaner is manufactured to withstand normal day-to-day use but an occasional wipe over with a damp cloth will assist in maintaining its good looks. Abrasive cleaners will damage the surface finish and should not be used.


If your cleaner fails to function correctly please check the following points which may result in the cleaning efficiency being impaired.

- * Incorrect cleaning height adjustment - see the section "Using Your Cleaner".
- * Dust bag full - see the section "Checking and Changing the Dust Bag".
- * Beater brush drive belt broken - see the following section.
- * Beater brushes worn - see the following section.

Replacing the Drive Belt (P/N 91960-01)

1 DISCONNECT THE CLEANER FROM THE MAINS ELECTRICAL SUPPLY BEFORE WORKING ON THE CLEANER.

2 Turn the cleaner over and remove the cover plate by removing the four screws (X).

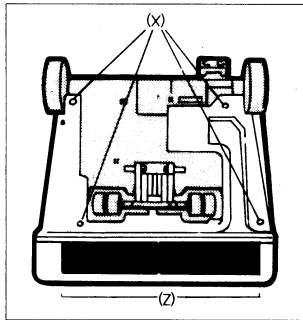

3 Lift out the beater brush and release the drive belt from the motor pulley. Fit a new drive belt around the brush.

4 Locate the new belt onto the motor pulley and position the beater brush in the locations in the cleaner housing. This requires some stretching of the belt and always ensure that the brush bearings (T) are correctly repositioned with the small projections (Y) at top and bottom.


5 Push firmly into position.

6 Relocate the cover plate by placing the two retaining lugs (Z) in position and secure with four screws.

Replacing the Beater Brush (P/N 91961-01)

1 DISCONNECT THE CLEANER FROM THE MAINS ELECTRICAL SUPPLY BEFORE WORKING ON THE CLEANER.

2 Remove the beater brush as for replacing the drive belt.

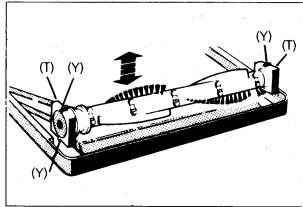


3 Hold the two end brush bearings (T) and pull off. Fit them into the new brush and replace in the cleaner as previously described in "Replacing the Drive Belt".

Replacement Drive Belts (P/N 91960-01) and Beater Brush (P/N 91961-01) are available from Goblin Ltd or from your local Goblin Authorised Service Agent.

Removing Obstructions

In the unlikely event of the air duct in the hard box model becoming blocked it is possible to clear in the following way:

- 1 DISCONNECT THE CLEANER FROM THE MAINS ELECTRICAL SUPPLY BEFORE WORKING ON THE CLEANER.
- 2 Open bag door and remove.
- 3 Remove paper bag.
- 4 Remove 3 screws (A) and lift off duct cover.
- 5 Remove any obstruction.
- 6 Refit in reverse manner.

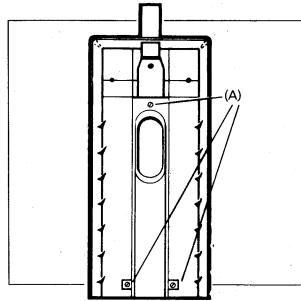


Replacing the Headlight Bulb (if fitted) (P/N 14543-70)

1 DISCONNECT THE CLEANER FROM THE MAINS ELECTRICAL SUPPLY BEFORE WORKING ON THE CLEANER.

2 Remove the height adjustment knob by pulling off.


3 With the handle in the lowest position turn the cleaner over and remove the cover plate by removing the four screws (X).

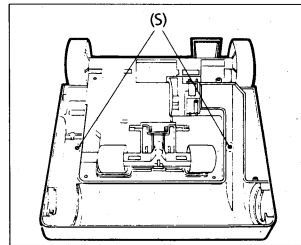

4 Lift out the beater brush and drive belt (as described above) and remove the two top cover attaching screws (S).

5 Turn the machine over and with the handle in the lowest position, remove the top cover.

6 The bulb has a bayonet type fitting. Replace the bulb. Refit the top cover, beater brush, drive belt and cover plate in reverse order to dismantling and replace the height adjustment knob.

Note when replacing the top cover ensure that the aperture for the "TOOLS" flap  is correctly located.

Important Safeguards

Never pick up any liquids or inflammable or poisonous solids, such as copier toner.

Never use in the presence of explosive liquids or vapours.

Never pick up asbestos or asbestos dust.

Never pick up hot or glowing ash, hot cigarette ends, hot coals or any other similar items.

Never modify the cleaner in any way.

When servicing use only genuine Goblin spare parts.

Repairs should only be carried out by authorised Service Agents.

Never allow children to play with or use this appliance.

Do not use or keep this product outside when it is raining.

Keep hands away from agitator when in use or when using tools.

Guarantee and Service Procedures

Should your cleaner become defective during the guarantee period please return the appliance to your nearest Goblin Authorised Service Agent, a list of which is to be found in the accompanying leaflet. The defective part will be repaired or, at our option, replaced free of any charge for labour or materials provided that:

- 1 The cleaner has been operated on an electric supply which matches that shown on the rating plate.
- 2 The cleaner is accompanied by proof-of-purchase.
- 3 Only genuine Goblin parts have been used.
- 4 The cleaner has not been used for commercial application unless otherwise specified.

Please Note Excluded from the guarantee are parts which need replacement due to normal wear and tear, such as filters, dust bags, brushes, belts and bulbs. These are not covered if misused or incorrectly fitted. This guarantee in no way diminishes the buyer's statutory or legal rights.

Service

To avoid unnecessary and expensive service calls, carry out the following simple checks if you suspect a fault.

1 Check the dustbag - the suction will be impaired if the bag is allowed to become overloaded.

2 If your cleaner does not function, check that the plug is firmly inserted in the socket and that the supply is switched on.



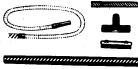
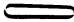 
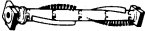 

3 Make sure that the socket is operating correctly by trying another appliance.

4 If the socket is working but the motor is still not running, check or replace any plug or adaptor fuses and check that all plug connections are sound.

Consult the enclosed leaflet for information on:
AUTHORISED SERVICE AGENTS

Accessories

Order Form

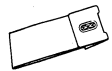Product	Description	Cat No	Unit Price	Qty	£	p
1	 Pack of 5 dustbags	90540-01	£3.14			
2	 Dustbag retainer slide	91963-01	£0.99			
3	 Accessory tool kit	80111-01	£9.99			
4	 Drive belt	91960-01	£1.09			
5	 Beater brush	91961-01	£5.45			
6	 Headlight bulb	14543-70	£1.04			
					Add £1.50 p&p if total is less than £10.00	
					TOTAL	